

**Dr. Brown's Microwave  
Steam Sterilizer  
USAGE INSTRUCTIONS**

**Cleaning And Assembly**

- Fully disassemble all parts of the baby bottle before each use.
- Thoroughly wash and rinse all parts in hot water and detergent.
- Carefully clean nipples, inserts and reservoirs, making sure each hole is completely clean and clear. Be sure to follow the Instructions Sheet supplied with the baby bottles.
- Rinse the lid, steam tray and bottom of the Steam Sterilizer thoroughly with clean water.
- Place the steam tray onto the bottom, then turn it 90° to ensure that it is in a secure, fixed position. (See Diagram A)
- Pour 6 ounces of water into the center of the bottom. Use a graduated feeding bottle to measure the correct amount.

**Warning:** Never put any liquid other than tap water into the sterilizer.

*Note: Failure to add the right amount of water may cause damage to the products and/or your microwave.*

**For Use With Wide-Neck Bottles And Parts**

- Up to four Wide-Neck bottles can be sterilized at one time.
- Place the bottle neck facing downward and direct it into the round hole with "+" stands. (See Diagram B)
- Insert the nipple into the collar, then place it between the bottles. (See Diagram C) *Note:* After sterilization, hold the outer part of the bottle collar to assemble to avoid nipple contamination.

- Place the insert downward into the bottle cover (bottle cover should face down-ward), then position in the middle of the steam tray. (See Diagram D)
- Place the reservoirs with the nipples and bottles, then position stoppers near the bottles. (See Diagram E)

**For Use With Standard Bottles And Parts**

- Up to four Standard bottles can be sterilized at one time.
- Push the bottles into the steam tray's crescent-shaped holes so that they are supported at an approximately 30° to 40° angle. (See Diagram F)
- Insert the nipple downward into bottle collar, then direct it into the round hole with "+" stands. (See Diagram G)
- *Note:* After sterilization, hold the outer part of the bottle collar to assemble to avoid nipple contamination.
- Place the insert upward, in between the bottle and bottle collar. (See Diagram H)
- Bottle covers can be placed in the middle of the steam tray. (See Diagram I)
- Place the reservoirs with the bottle collars, then position stoppers near the bottles. (See Diagram J)

**Microwave Instructions**

- After properly positioning bottles and parts, place the lid on the sterilizer and insert into microwave. *Note:* The sterilizer should be placed in the center of the microwave.
- The exact time necessary to sterilize the bottles depends on the microwave wattage. Please see the attached TABLE for the correct time.


- **WARNING:** Before using, be sure to read complete Usage Instructions provided with this sterilizer unit. When sterilizing, never use the unit without the recommended amount of water. After sterilizing cycle, be sure to let the unit cool for at least 10 minutes before handling. Be careful removing unit from microwave after sterilizing cycle. Water in sterilizer will be hot. Be sure to always hold sterilizer using the side handles. There are four handles, use two on opposite sides for stable grip. Mishandling the sterilizer could result in scalding. Keep out of the reach of children.

**Be sure to observe Cooling Time as sterilizer unit and water will be hot.**

**Sterilizing Timetable:**

MICROWAVE WATTAGE	WATER (OUNCES)	STERILIZING COOLING	
		TIME (MINUTES)	TIME (MINUTES)
1000 ~ 1100 W	6	5	10
800 ~ 900 W	6	6	10
500 ~ 700 W	6	8	10

*Note: The Dr. Brown's Microwave Steam Sterilizer is specifically designed for Dr. Brown's bottles and accessories.*

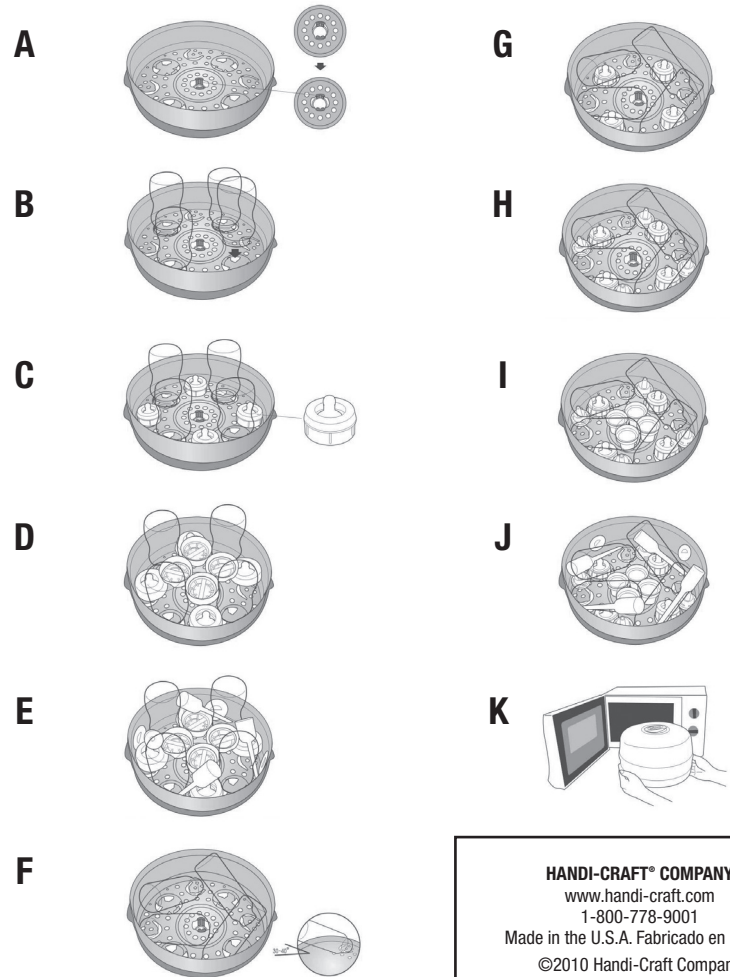

**HANDI-CRAFT® COMPANY**  
www.handi-craft.com  
1-800-778-9001  
Made in the U.S.A. Fabricado en EE.UU.  
©2010 Handi-Craft Company